



Model # RPD6

Instructions Sheet


**RECYCLED PLASTIC DELUXE PICNIC TABLE**

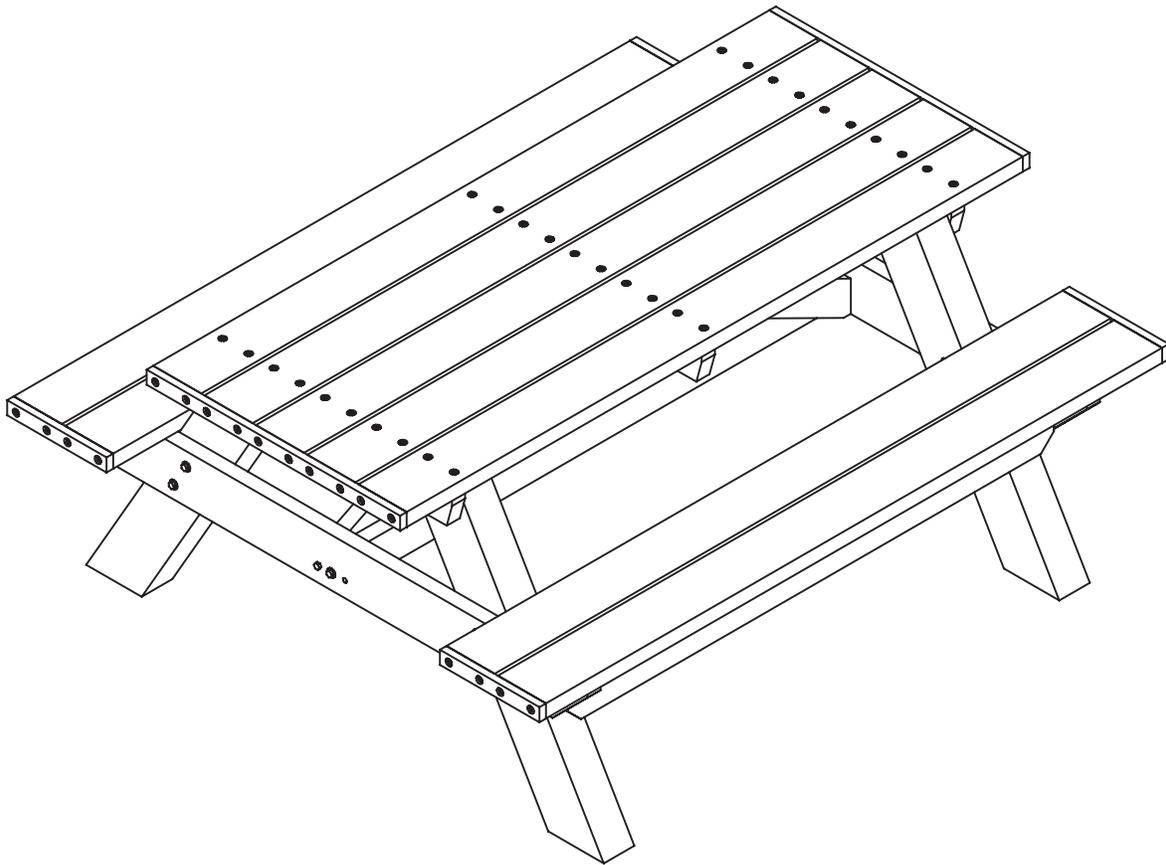


BEFORE ASSEMBLY, PLEASE MAKE SURE ALL COMPONENTS ARE INCLUDED.




FP - FASTENER PACK  
(1) - ONE FASTENER PACK

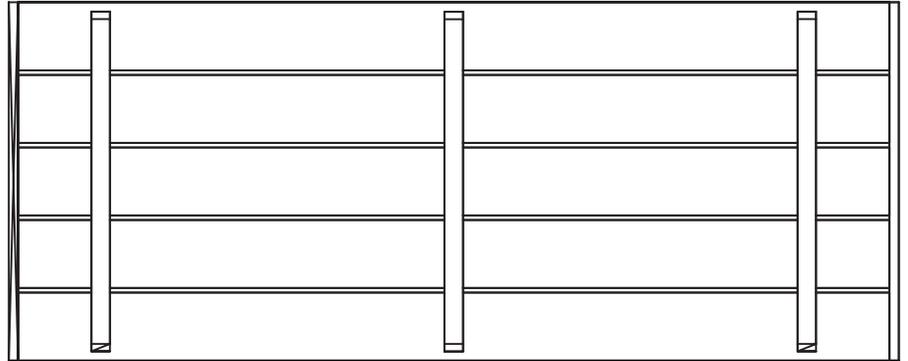

C - TABLE TOP  
(1) - ONE TABLE TOP

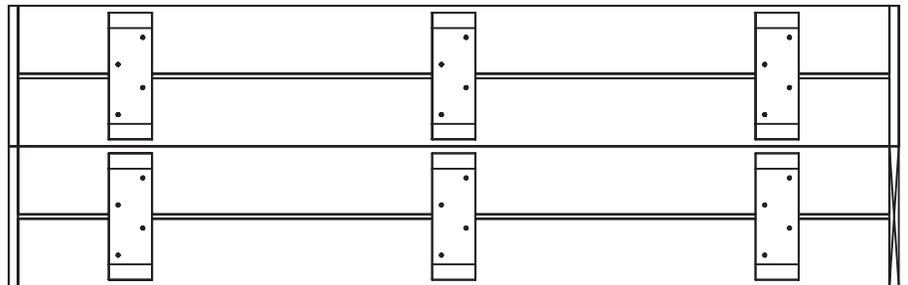


D - SEAT  
(2) - TWO SEATS

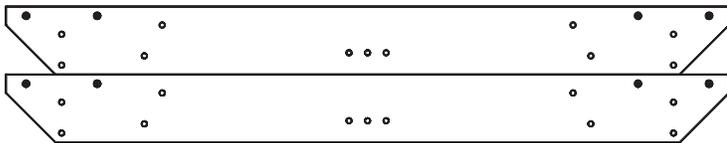


H - SEAT CROSS SUPPORT  
(2) - TWO SEAT CROSS SUPPORTS



O - CENTER SUPPORT  
(1) - ONE CENTER SUPPORT

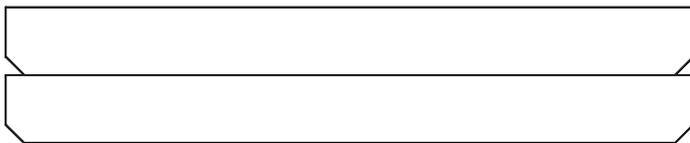


G - UNDER SEAT SUPPORT  
(2) - TWO UNDER SEAT SUPPORTS

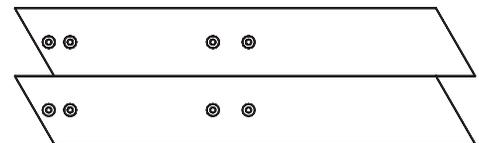

K - RIGHT LEG  
(2) - TWO RIGHT LEGS




N - ANGLE SUPPORT  
(2) - TWO ANGLE SUPPORTS

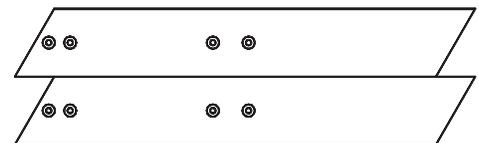


J - LEFT LEG  
(2) - TWO LEFT LEGS

BEFORE ASSEMBLY, PLEASE MAKE SURE ALL FASTENERS ARE INCLUDED.


2 - 3/8" X 4" HEX HEAD TAP BOLT

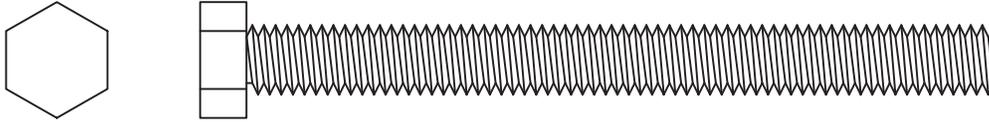


16 - 3/8" X 5" HEX HEAD BOLT

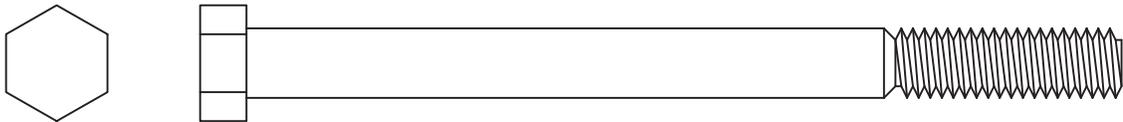


8 - 3/8" X 3" HEX HEAD LAG BOLT

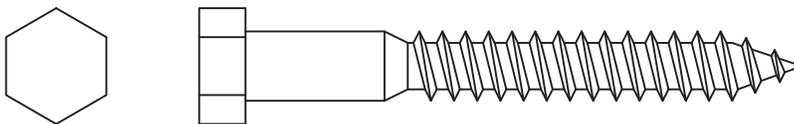


4 - 3/8" X 2 1/2" HEX HEAD LAG BOLT

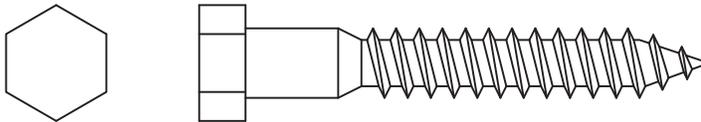


46 - 3/8" FLAT WASHER

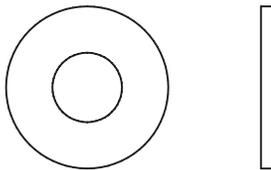


2 - 5/8" X 1" CROSS DOWEL

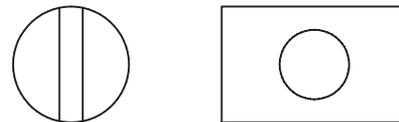

16 - 3/8" NYLON LOCK NUT

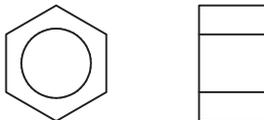


8 - #12 X 3" FLAT HEAD PHILLIPS SCREW



ALSO NEEDED FOR THIS ASSEMBLY WILL BE THE FOLLOWING MATERIALS:


- 1 - #3 PHILLIPS DRIVE BIT
- 2 - 9/16" SOCKET WRENCH
- 1 - 1/4" FLAT HEAD SCREWDRIVER

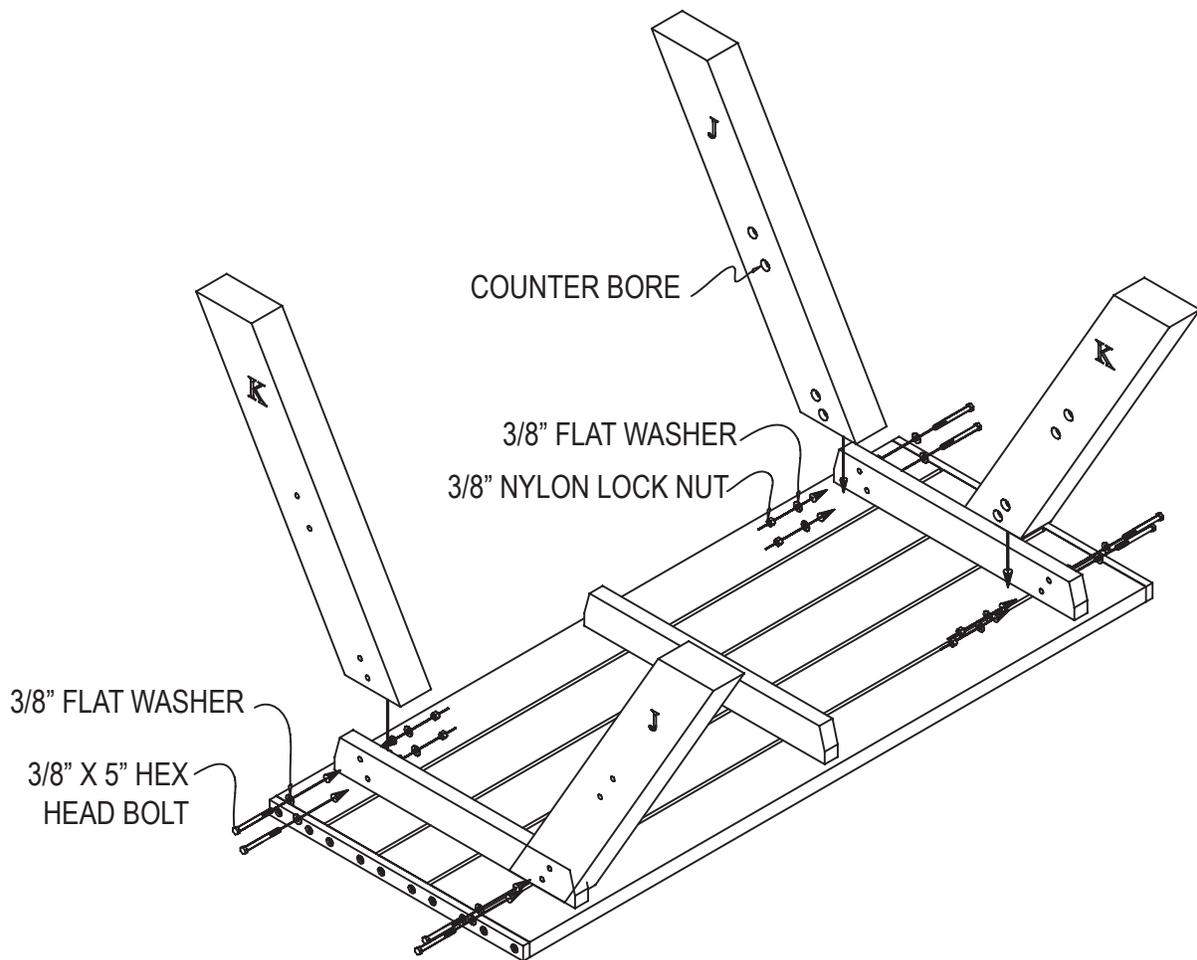

**STEP #1:**

WHILE THE TABLE TOP IS UPSIDE-DOWN, FASTEN THE LEGS TO THE UNDER TOP SUPPORTS BEING SURE THAT THE COUNTER BORES ARE POINTING TOWARD THE CENTER OF THE TABLE AS SHOWN ABOVE. USE ( 1 ) ONE 3/8" X 5" HEX HEAD BOLT ALONG WITH ( 1 ) ONE 3/8" FLAT WASHER AND ( 1 ) 3/8" NYLON LOCK NUT PER HOLE TO SECURE.

NOTE: DO NOT TIGHTEN BOLTS COMPLETELY. THIS WILL BE DONE IN A LATER STEP.

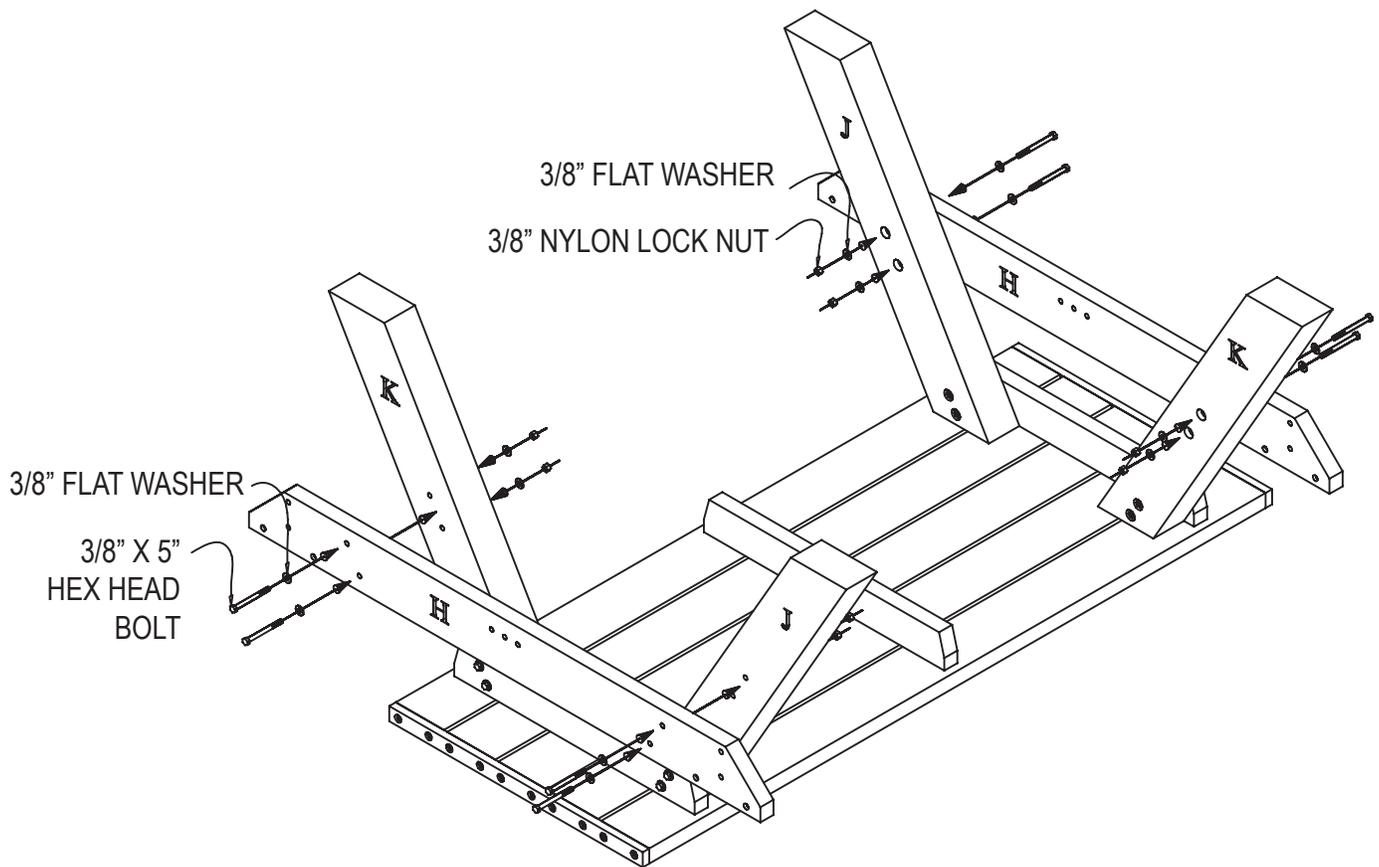


**STEP #2:**

WHILE THE TABLE TOP IS UPSIDE - DOWN, FASTEN THE SEAT CROSS SUPPORTS TO THE LEGS.

USE ( 1 ) ONE 3/8" X 5" HEX HEAD BOLT ALONG WITH ( 1 ) ONE 3/8" FLAT WASHER AND ( 1 ) 3/8" NYLON LOCK NUT PER HOLE TO SECURE.

NOTE: DO NOT TIGHTEN BOLTS COMPLETELY. THIS WILL BE DONE IN A LATER STEP.

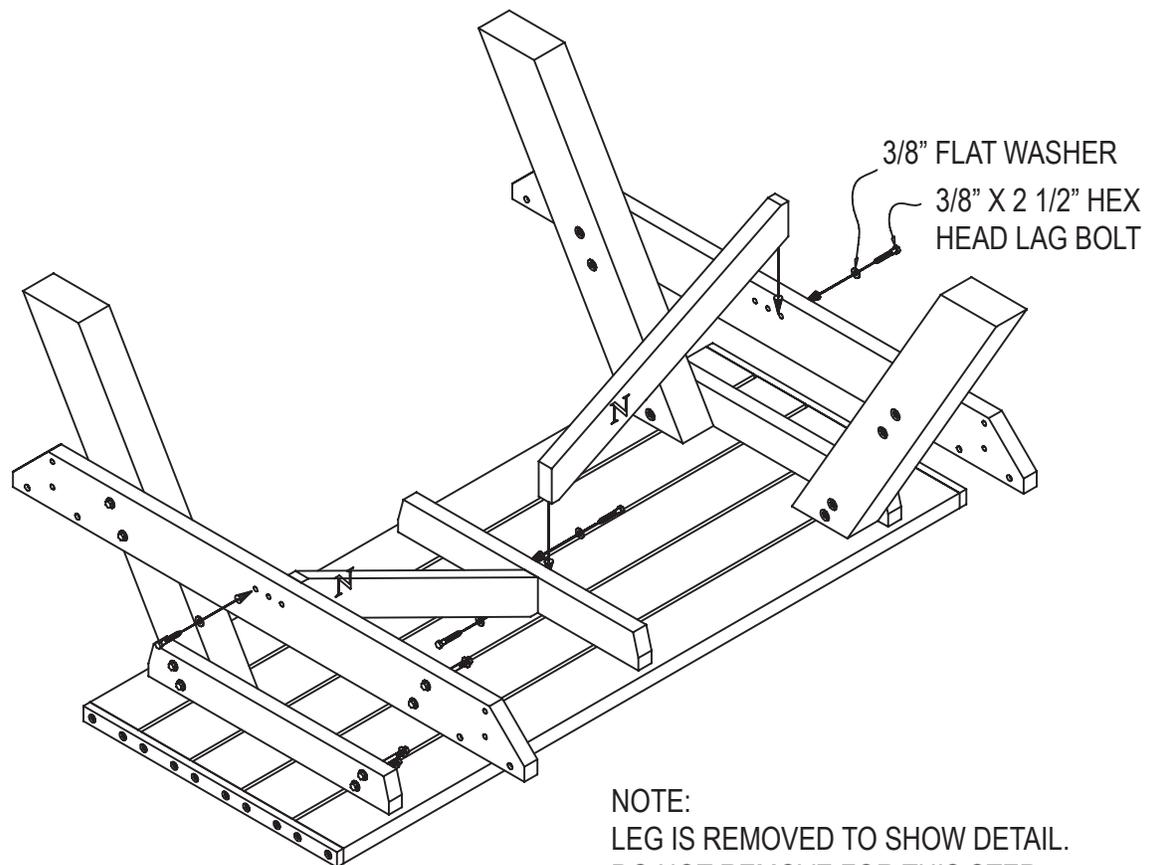


**STEP #3:**

WHILE THE TABLE TOP IS UPSIDE-DOWN, FASTEN AND ANGLE SUPPORTS TO THE SEAT CROSS SUPPORTS AND THE CENTER TOP SUPPORT. USE ( 1 ) ONE 3/8" X 2 1/2" HEX HEAD LAG BOLT AND ( 1 ) ONE 3/8" FLAT WASHER PER HOLE TO SECURE.

NOTE: BE SURE TO TIGHTEN ALL LOOSE BOLTS AFTER THIS STEP IS COMPLETE.


**STEP #4:**

PLACE ( 1 ) ONE 5/8" X 1" CROSS DOWEL IN EACH HOLE OF THE CENTER SUPPORT AS SHOWN IN THE DIAGRAM BELOW. YOU MAY NEED TO TAP THE CROSS DOWELS IN PLACE. BE SURE THE SCORE ON THE DOWEL HEAD IS IN LINE WITH THE LENGTH OF THE CENTER SUPPORT AS SHOWN BELOW.

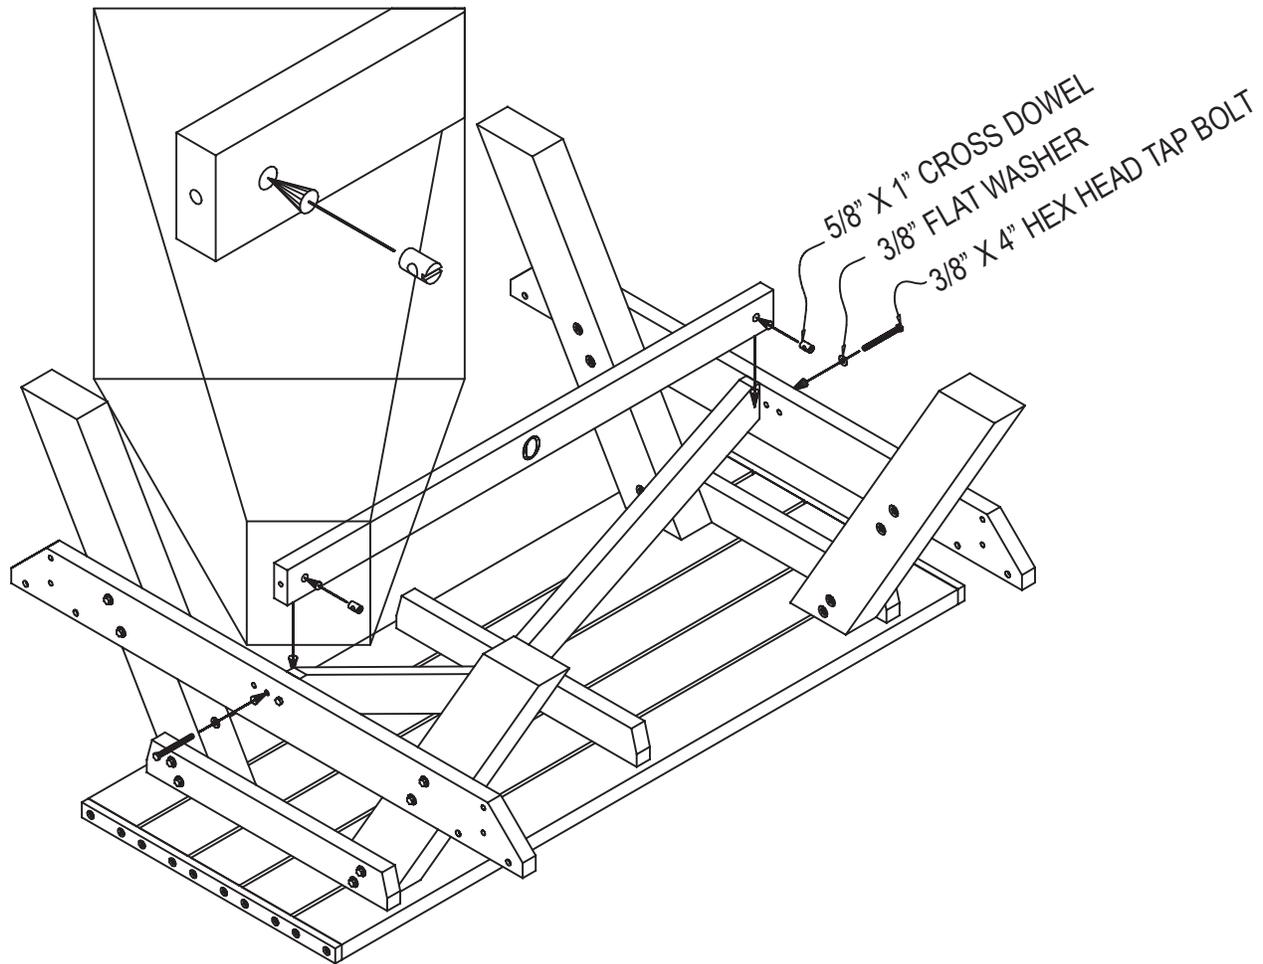


**STEP #5:**

WHILE THE TABLE TOP IS UPSIDE-DOWN, FASTEN THE CENTER SUPPORT TO THE SEAT SUPPORTS. USE ( 1 ) ONE 3/8" X 4" HEX HEAD TAP BOLT AND ( 1 ) ONE 3/8" FLAT WASHER PER HOLE TO SECURE.

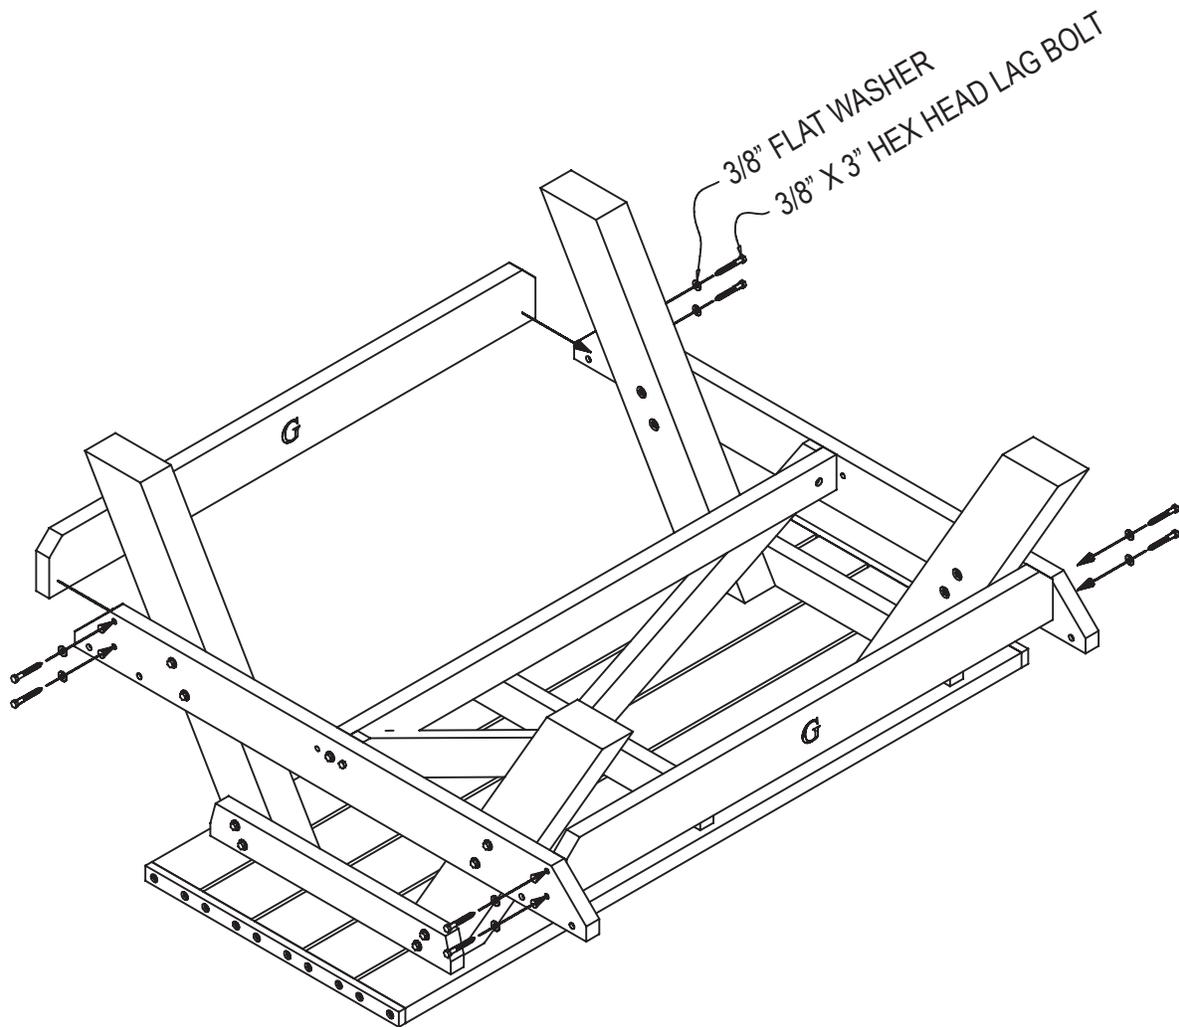


**STEP #6:**

WHILE THE TABLE TOP IS UPSIDE-DOWN, FASTEN THE UNDER SEAT SUPPORTS TO THE SEAT CROSS SUPPORTS. USE ( 1 ) ONE 3/8" X 3" HEX HEAD LAG BOLT AND ( 1 ) ONE 3/8" FLAT WASHER PER HOLE TO SECURE.

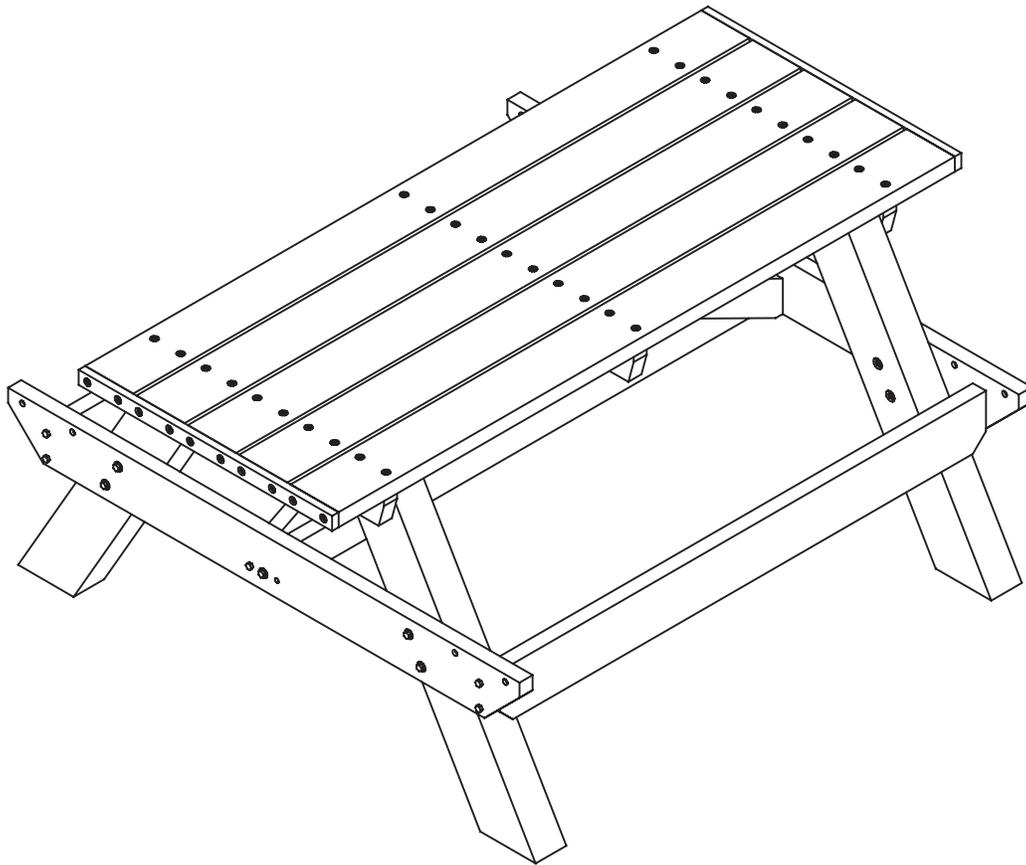

**STEP #7:**

FLIP THE TABLE UPRIGHT ONTO THE LEGS. PLEASE TAKE CAUTION WHILE FLIPPING THE TABLE. AT THIS POINT IN ASSEMBLY THE TABLE WEIGHS APPROXIMATELY 260 POUNDS.

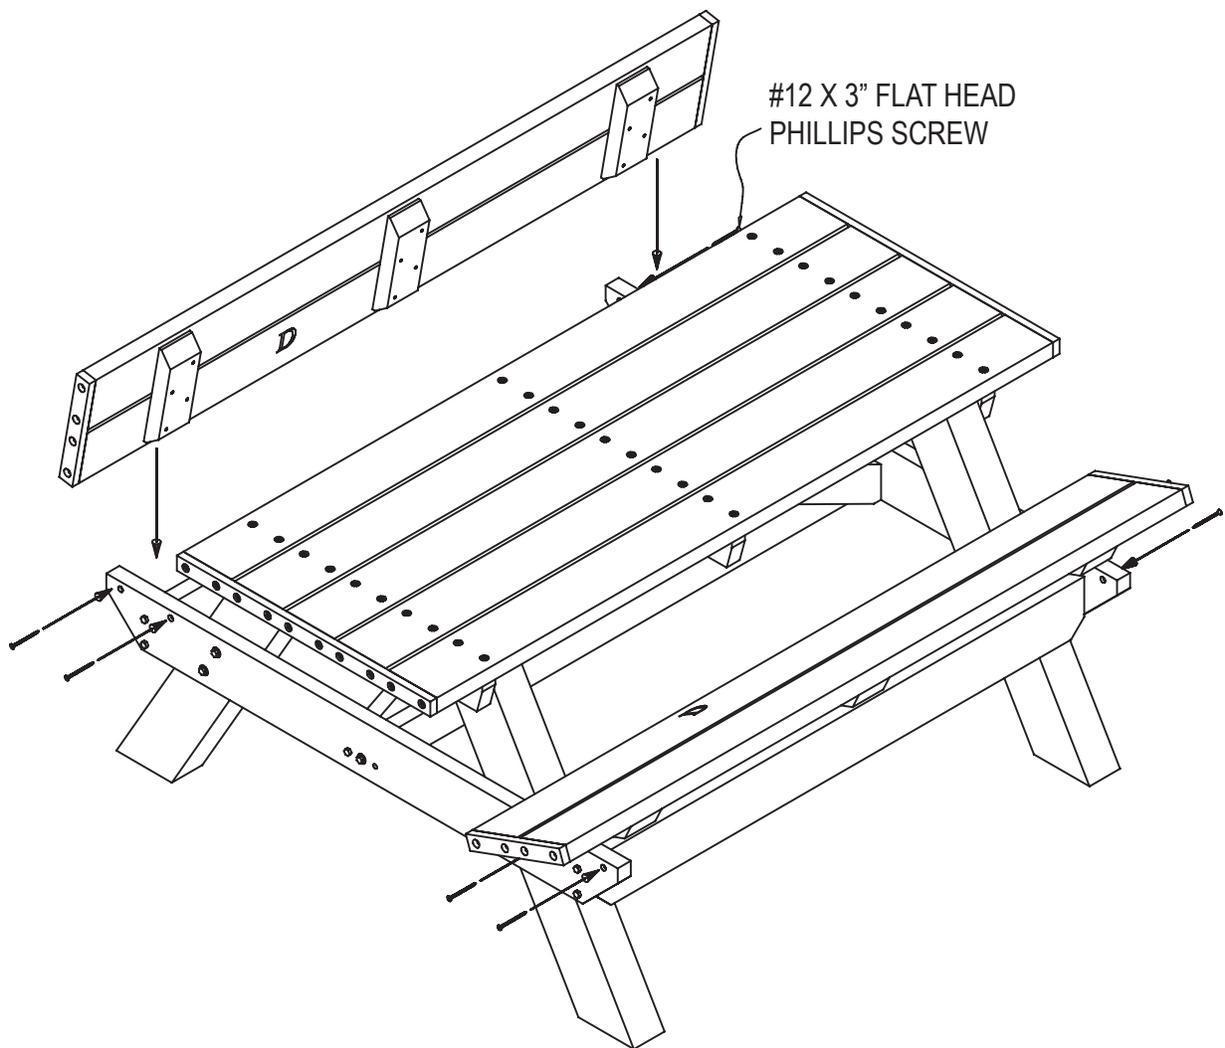

**STEP #8:**

WHILE THE TABLE IS UPRIGHT FASTEN THE SEATS TO THE SEAT CROSS SUPPORTS BEING SURE TO CENTER ALL HOLES OVER BOARDS. USE ( 1 ) ONE #12 X 3" FLAT HEAD PHILLIPS SCREW PER HOLE TO SECURE.