


Model # MCP-S-DSP

Instructions Sheet


SMALL OUTDOOR MESSAGE CENTER

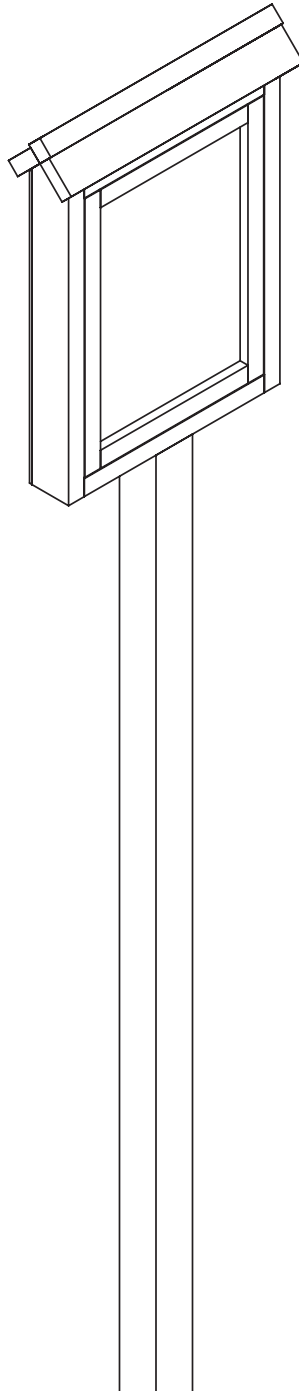

BEFORE ASSEMBLY, PLEASE MAKE SURE ALL COMPONENTS ARE INCLUDED.



(1) - ONE FASTENER PACK

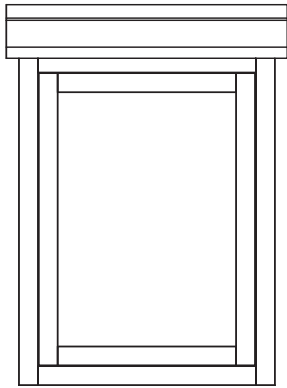


(1) - ONE MESSAGE CENTER




(1) - ONE POST

BEFORE ASSEMBLY, PLEASE MAKE SURE ALL FASTENERS ARE INCLUDED.

3 - #12 X 2" FLAT HEAD PHILLIPS SCREW




2 - LOCK KEY

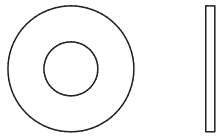

ALSO NEEDED FOR THIS ASSEMBLY WILL BE THE FOLLOWING MATERIALS:

1 - 9/16" SOCKET WRENCH

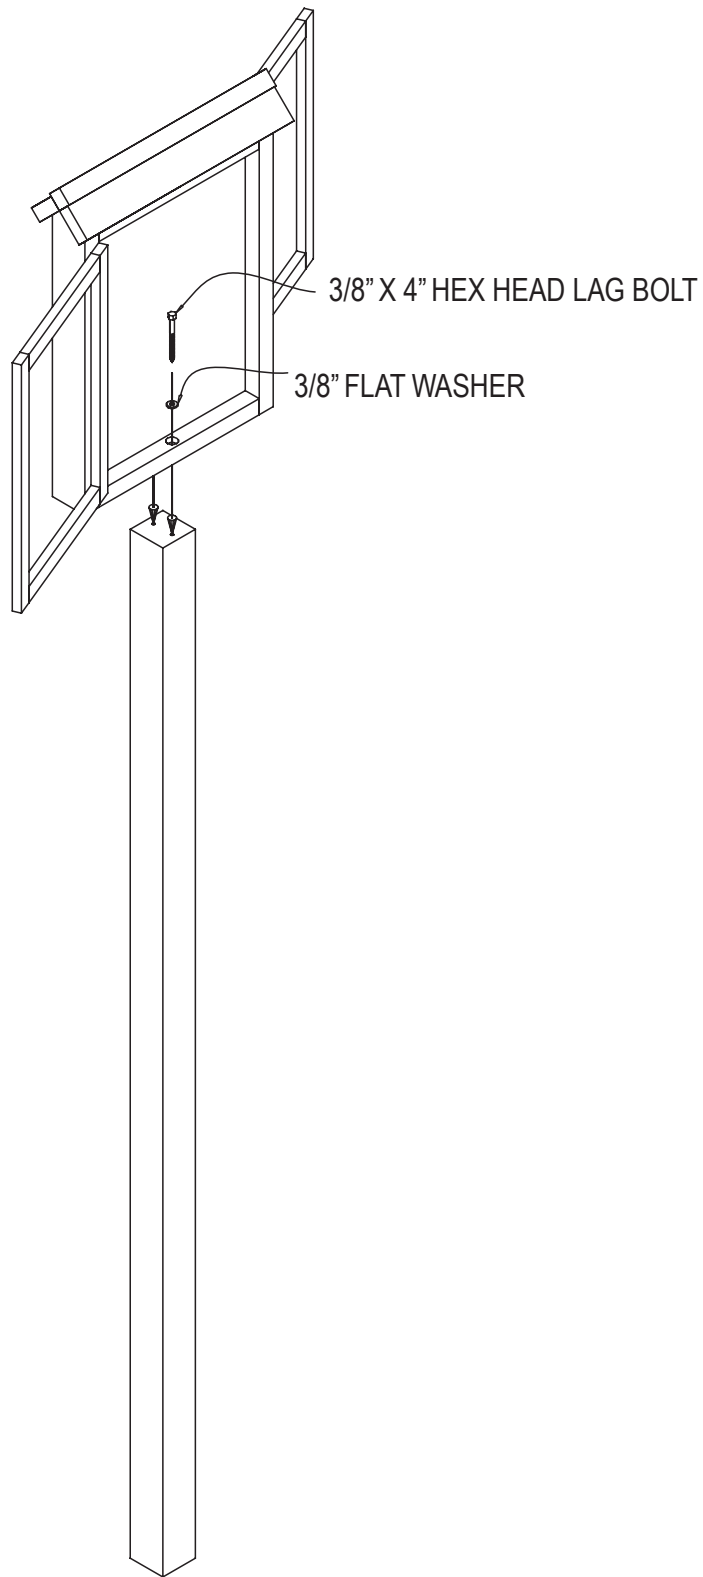

STEP #1:

OPEN THE ACCESS DOORS AND PLACE THE MESSAGE CENTER ON TOP OF THE POST BEING SURE TO ALIGN THE PRE DRILLED HOLES WITH THE PILOT HOLES. PLACE (1) - ONE 3/8" X 4" LAG BOLT AND (1) - ONE 3/8" FLAT WASHER PER HOLE. SECURE THE BOLTS TIGHT BEING CAREFUL NOT TO OVER TIGHTEN THE BOLTS.