



Model # T40-02

Instructions Sheet


40 GALLON TRASH RECEPTACLE

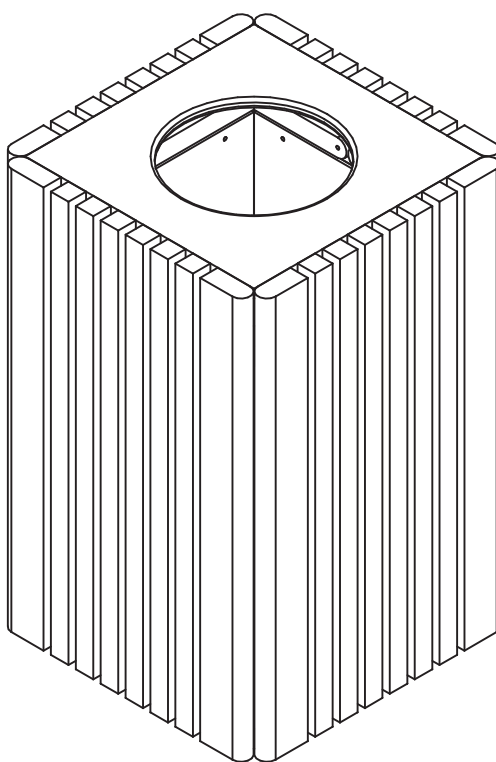


BEFORE ASSEMBLY, PLEASE MAKE SURE ALL COMPONENTS ARE INCLUDED.

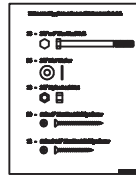


FP - FASTENER PACK
(1) - ONE FASTENER PACK

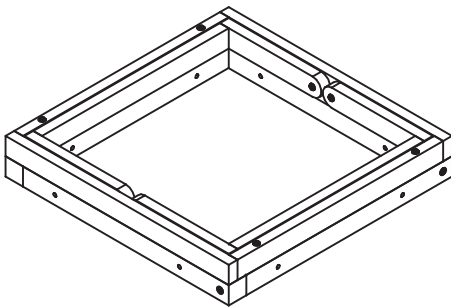


D - BAG HOLDER RING
(1) - ONE BAG HOLDER RING

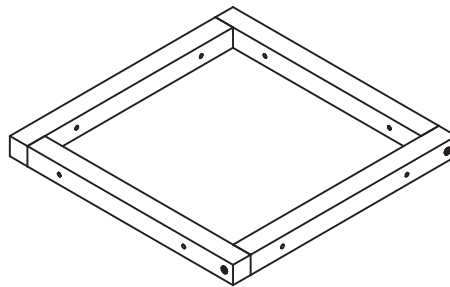


B - FRAME KIT
(1) - ONE FRAME RING

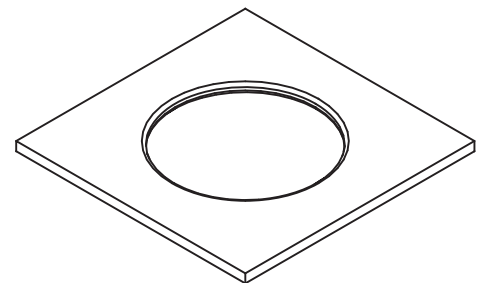

C - FLAT TOP
(1) - FLAT TOP

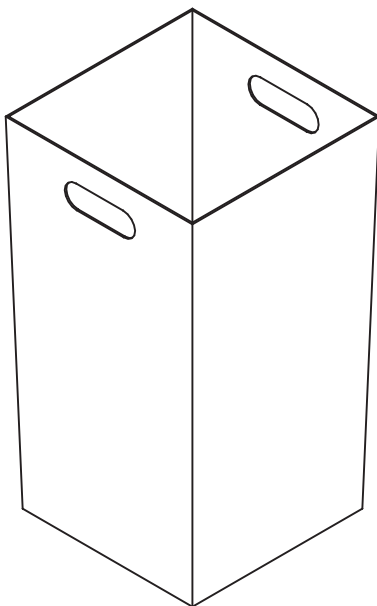

(1) - ONE TRASH CAN LINER

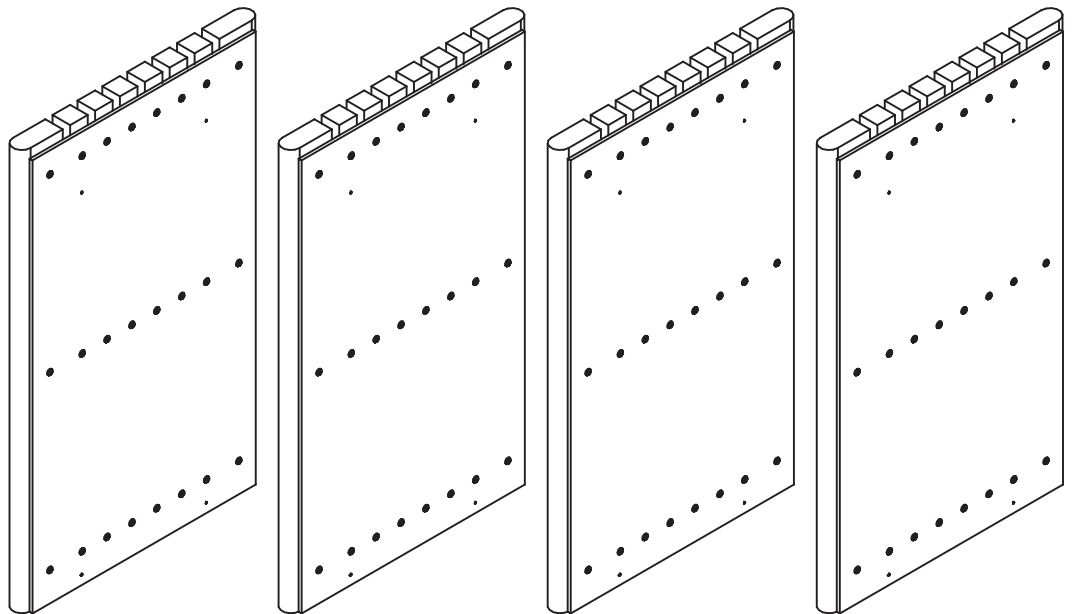

A - SIDE PANEL
(4) - FOUR SIDE PANELS


BEFORE ASSEMBLY, PLEASE MAKE SURE ALL FASTENERS ARE INCLUDED.

16 - #12 X 2-1/2" FLAT HEAD PHILLIPS SCREWS




ALSO NEEDED FOR THIS ASSEMBLY WILL BE THE FOLLOWING MATERIALS:

1 - 3" PHILLIPS DRIVE BIT

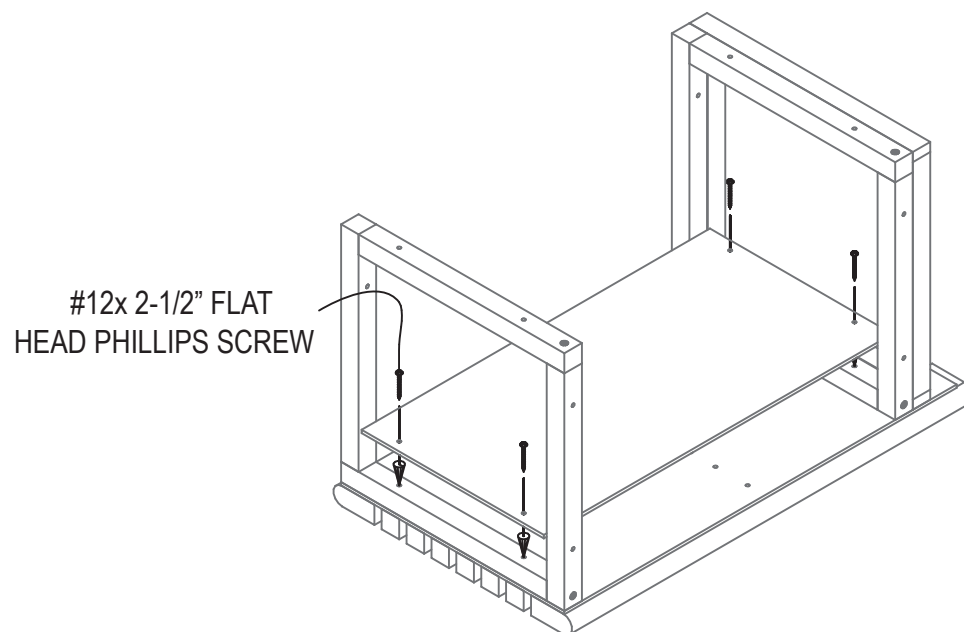


STEP #1:

LAY A SIDE PANEL AS SHOWN. PLACE THE BAG HOLDER RING AT THE TOP OF THE PANEL AND THE FRAME RING AT THE BOTTOM OF THE PANEL, AS SHOWN IN THE ABOVE DIAGRAM. SLIDE THE INNER PANEL INTO THE CENTER OF THE TWO RINGS AS SHOWN ABOVE, MAKING SURE THE HOLES LINE UP WITH THE PRE-DRILLED PILOT HOLES IN THE PANEL. FASTEN USING (1) ONE 2-1/2" FLAT HEAD PHILLIPS SCREW PER HOLE.

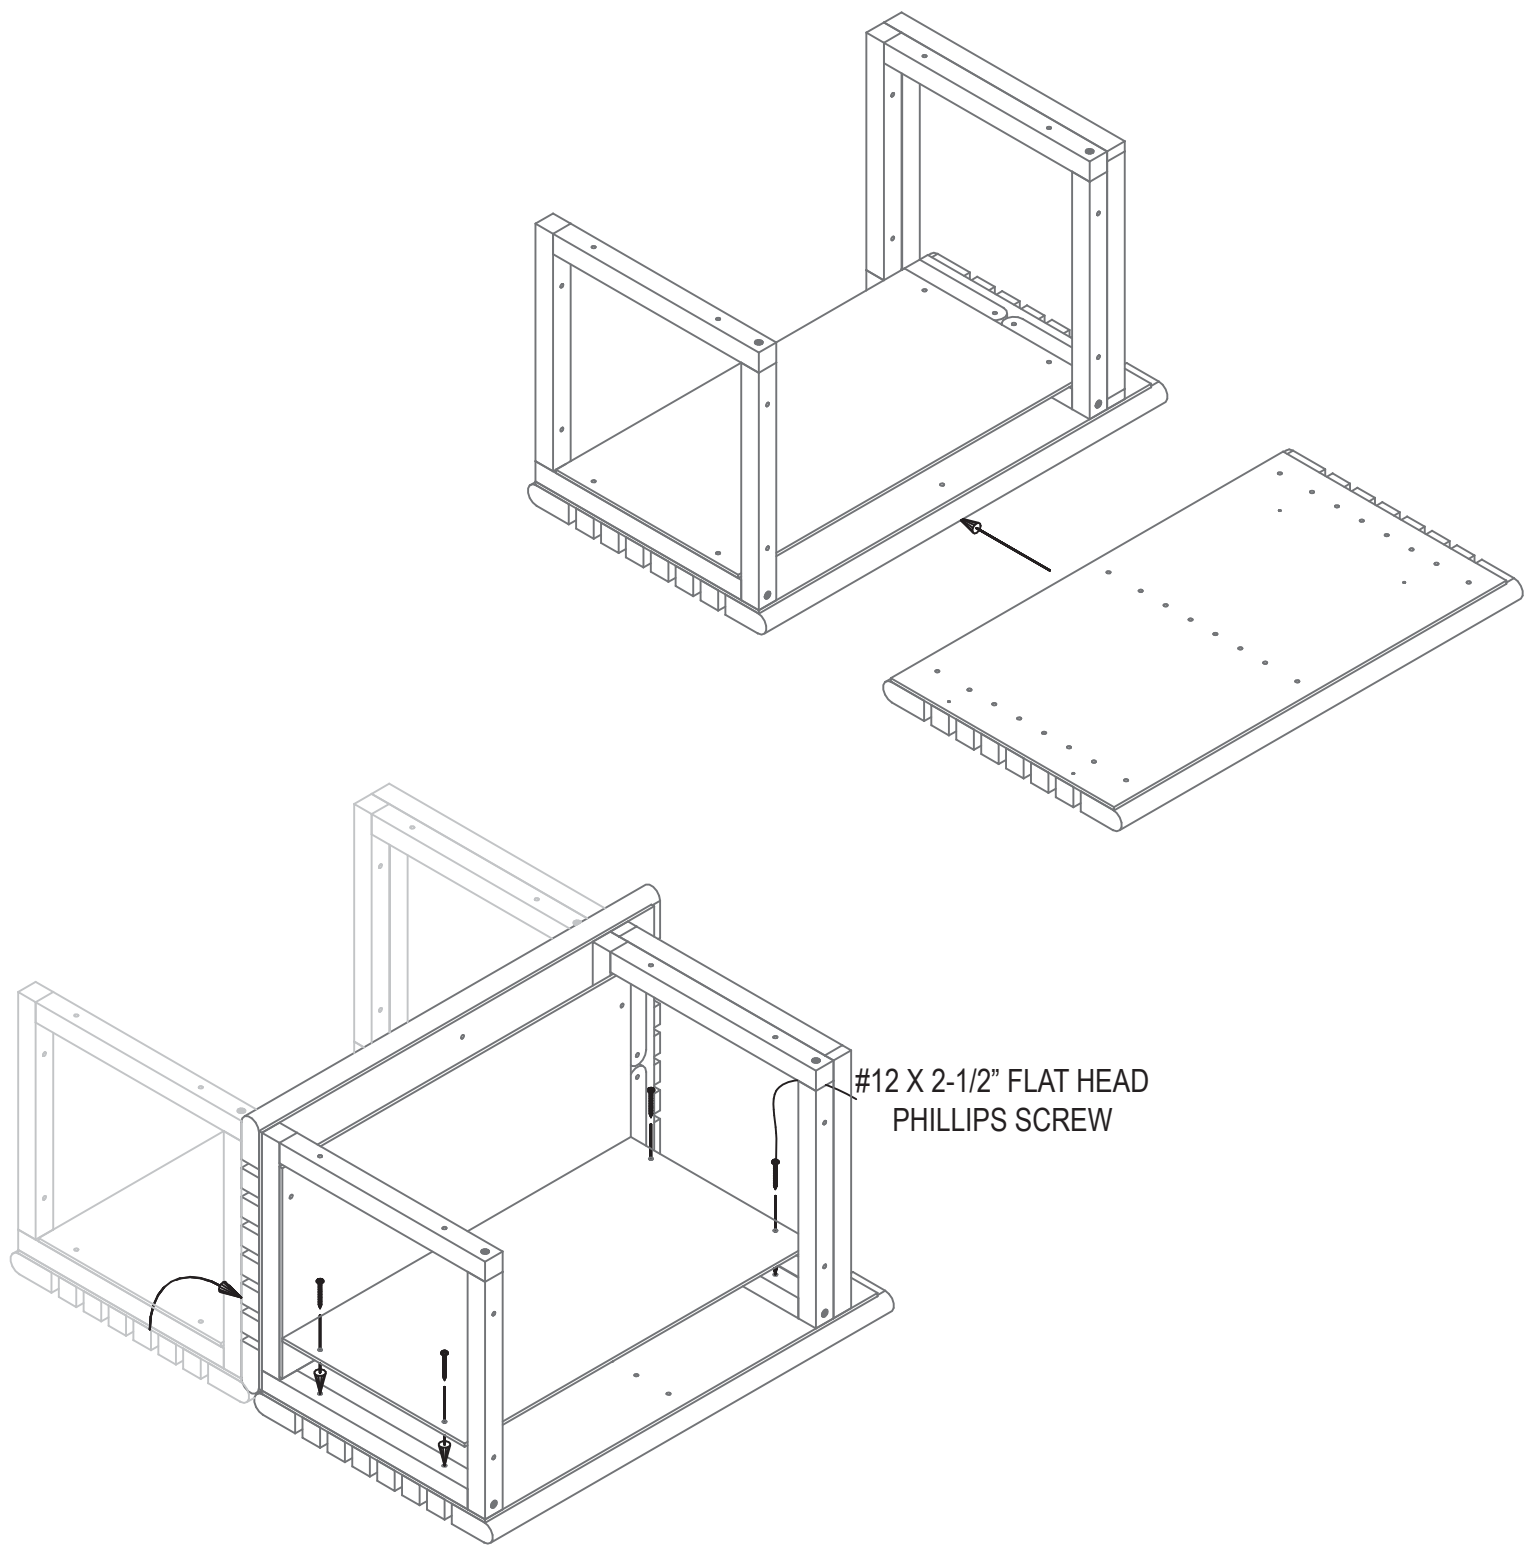


STEP #2: PLACE ANOTHER SIDE PANEL BESIDE THE PREVIOUS PANEL, SO THAT IT TOUCHES AS DISPLAYED IN THE DIAGRAM ABOVE. GENTLY TURN THE SIDE PANEL WITH THE RINGS INSTALLED ONTO THE NEW SIDE PANEL. SLIDE THE INNER PANEL INTO THE CENTER OF THE RINGS ABOVE, MAKING SURE THE HOLES LINE UP WITH THE PRE-DRILLED PILOT HOLES IN THE PANEL. FASTEN USING ONE #12 X 2-1/2" FLAT HEAD PHILLIPS SCREW PER HOLE. REPEAT THIS STEP FOR THE REST OF THE SIDE PANELS.

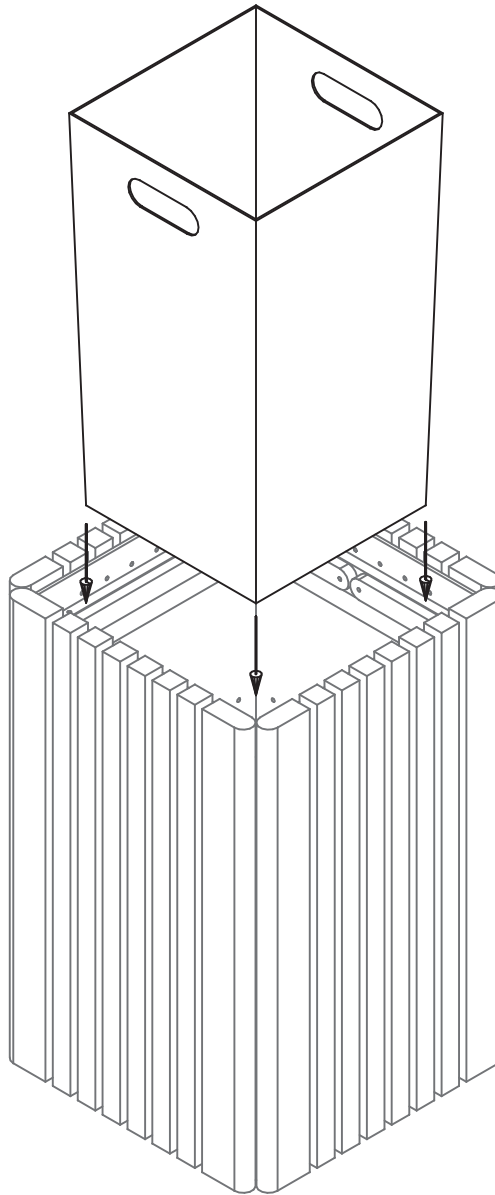

STEP #3:

TURN THE TRASH RECEPTACLE UPRIGHT ONTO ITS BASE. PLEASE USE CAUTION WHILE MOVING, AT THIS POINT IN ASSEMBLY, THE RECEPTACLE WILL WEIGH APPROXIMATELY 145 POUNDS. PLACE THE TRASH LINER INSIDE THE BASE.

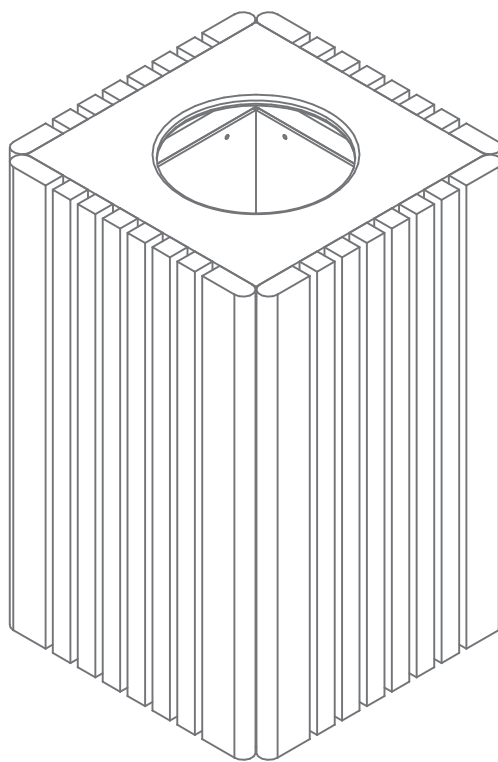

STEP #4:
TO PLACE THE LID ON THE TRASH RECEPTACLE, REST IT ON THE INNER LEDGE OF THE SIDE WALLS.