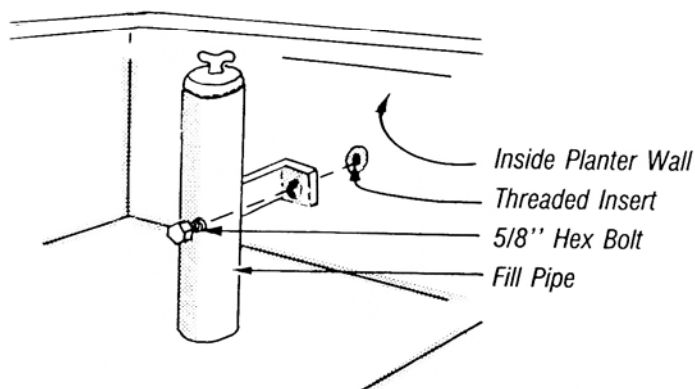
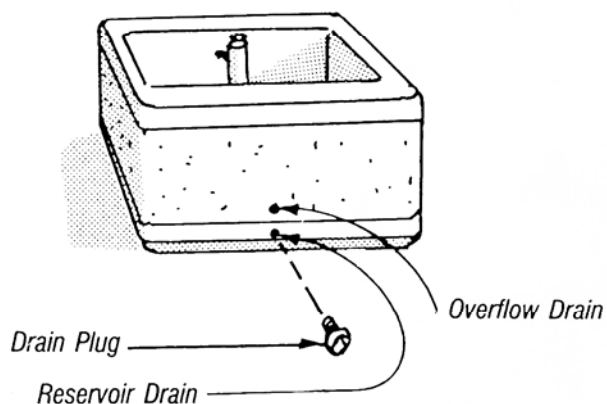


Model TF4900**Instruction Sheet****RESERVOIR SYSTEM**


Bolt the Filler Pipe to the inside planter wall using the 5/8" hex bolt and threaded insert.

1


Screw the threaded reservoir Drain Plug in place.

2

Cut slits in the Wick Disk as shown.

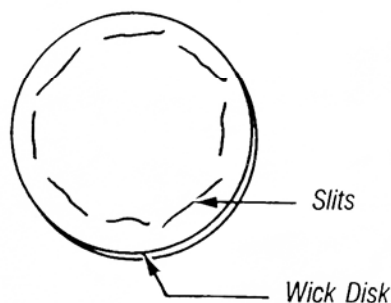
3

Slide Wicks through disk as shown.

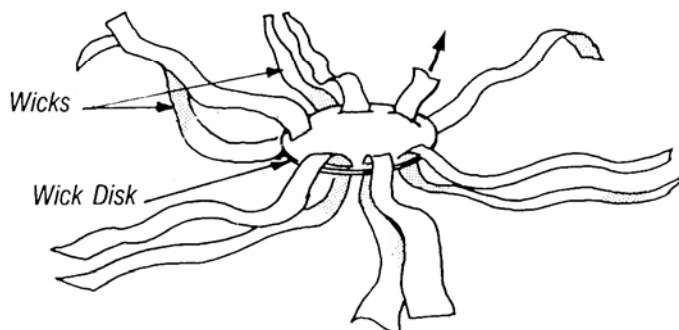4


5

Place the Wick Disk on the planter floor letting the wicks hang over the planter walls.

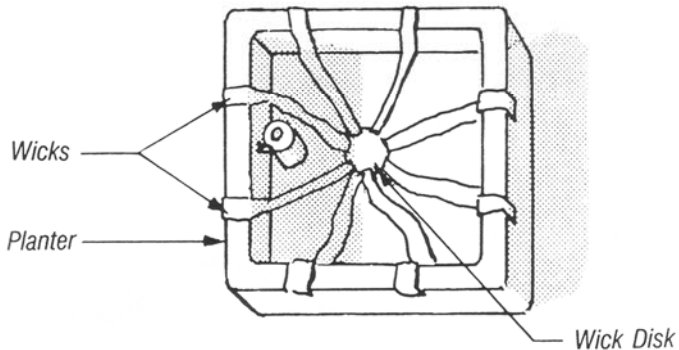


6

Using 5/8" to 3/4" stone, fill the planter to just above the overflow drain. Do not bury wicks.

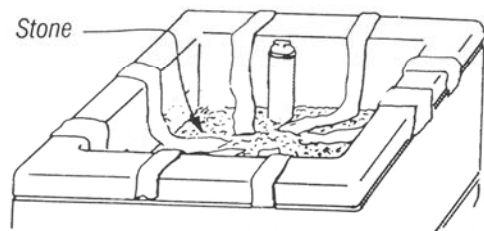


7

Pull wicks through the precut hole in the center of the membrane. Place the membrane neatly over the stone.

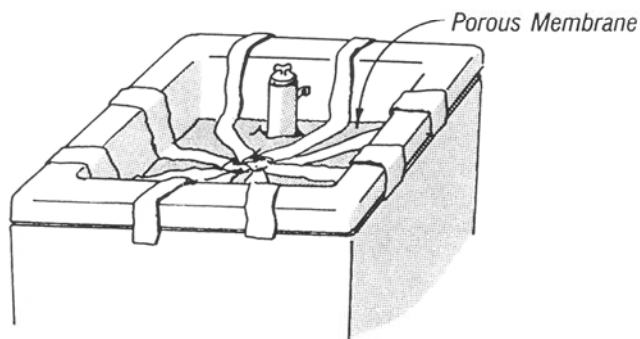

8

Add 1" to 4" (depending on planter and plant size) of topsoil. Do not bury wicks. Place root ball in the planter. Wrap wicks around the root ball and soak.

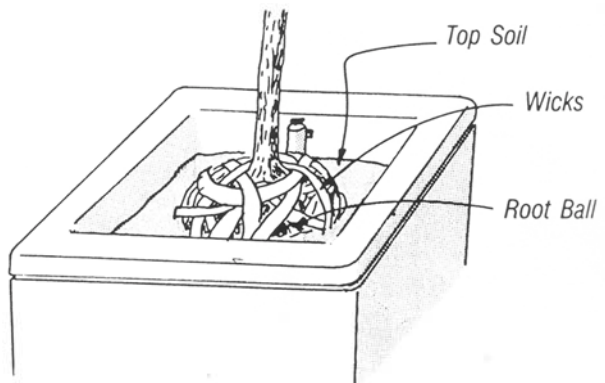

9

Fill planter with soil and cover with mulch. Fill pipe can be covered or left exposed.

